

Harmer Radio and Electronics Radio Operations Manual

Kenwood Rental Radio







Basic Operations

For assistance please call our office at 808-877-8082.

NOTE: Some radios are programmed with more than one channel, make sure you and your crew are communicating on the same channels.

PUSH-TO-TALK

Press the PTT button, then talk. If you talk too soon, the receiving radio may not hear the start of your sentence.

MICROPHONE:

Talk approximately 1 inch away from the mic. Mic is located on the front mid section of the radio.

Care and Charging:

- Radios are NOT water proof, keep them dry at all times.
 - Turn the radio off when its in the charg-ing bay.
 - You may charge the batteries separately from the radio.







KENWOOD Authorized Dealer



Harmer Radio and Electronics 300 Hoohana St. Kahului, HI 96732 808-877-8082 info@harmercommunications.com